

# RACCORDI A STRINGERE PER MULTISTRATO

## Raccordo Maschio



CODICE	MISURA
XX1001602	16x1/2
XX1001603	16x3/4
XX1002002	20x1/2
XX1002003	20x3/4
XX1002603	26x3/4
XX1002604	26x1
XX1003204	32x1

## Raccordo Intermedio



CODICE	MISURA
XX1011616	16x16
XX1012020	20x20
XX1012626	26x26
XX1013232	32x32

## Raccordo Femmina



CODICE	MISURA
XX1021602	16x1/2
XX1021603	16x3/4
XX1022002	20x1/2
XX1022003	20x3/4
XX1022603	26x3/4
XX1022604	26x1
XX1023204	32x1

## Tes Femmina



CODICE	MISURA
XX1091602	16x1/2
XX1092003	20x3/4
XX1092603	26x3/4
XX1093204	32x1

## Adattatore multistrato



CODICE	MISURA
XX1101602	16x2

## Tes Intermedio



CODICE	MISURA
XX1071616	16x16
XX1072020	20x20
XX1072626	26x26
XX1073232	32x32

## Gomito Femmina



CODICE	MISURA
XX1051602	16x1/2
XX1052002	20x1/2
XX1052003	20x3/4
XX1052603	26x3/4
XX1053204	32x1

## Gomito Maschio




CODICE	MISURA
XX1041602	16x1/2
XX1042002	20x1/2
XX1042003	20x3/4
XX1042603	26x3/4
XX1042604	26x1

## Gomito Intermedio



CODICE	MISURA
XX1031616	16x16
XX1032020	20x20
XX1032626	26x26
XX1033232	32x32

## Gomito Flangiato

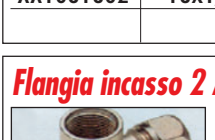

CODICE	MISURA
XX1061602	16x1/2

## Flangia incasso 2 Att.



CODICE	MISURA
XX1111602	16x1/2x16